

Getting Ready

Power Supply

Prepare a household power outlet or batteries.

IMPORTANT!

- Be sure to comply with the "Safety Precautions" provided in the separate "READ THIS!" sheet. Incorrect use of this product creates the risk of electric shock and fire.
- Always make sure that the Digital Keyboard is turned off before plugging in or unplugging the AC adaptor, or before loading or removing batteries.

Using a Household Power Outlet

Make sure that you use only the AC adaptor specified for this keyboard. Use of a different type of AC adaptor can cause malfunction.

CASIO

Specified AC Adaptor:

AD-E95100LE/LG/LJ/LU/LW*
(JEITA Standard plug)




- * Check with your dealer for the name of the AC adaptor to be used.

DC 9.5V terminal



 AC adaptor

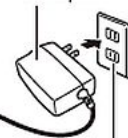

Household power outlet

 
IMPORTANT!

- The AC adaptor will become warm to the touch after very long use. This is normal and does not indicate malfunction.
- To prevent breaking of the wire, take care to avoid putting any type of load on the power cord.

No bending!



No winding!



Using Batteries

Use 6 commercially available size AA alkaline batteries or NiMH rechargeable batteries.

- Commercially available size AA manganese batteries can also be used, but because some types of usage may require high power consumption, the use of alkaline batteries or NiMH rechargeable batteries is recommended.

Note the precautions below when using rechargeable batteries.

 


- Use Panasonic Group AA-size eneloop rechargeable batteries. Do not use any other type of batteries.
- Use only the specified charger to charge batteries.
- Rechargeable batteries must be removed from the product for charging.
- For information about using eneloop batteries or their specified charger, be sure to read the user documentation and precautions that come with each item, and use them only as directed.


Open the battery cover on the bottom of the Digital Keyboard, load the batteries, and then close the cover.

- Take care to ensure that the positive (+) and negative (-) ends of the batteries are facing correctly.

Open the battery cover.

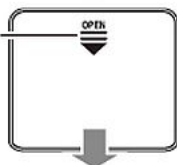

Load the batteries.

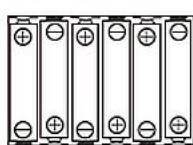 

Pressing here, slide in the direction indicated by the arrow.

IMPORTANT!

- Battery life is approximately 12 hours of continuous use (based on alkaline batteries, normal play). Any of the symptoms below may indicate batteries are low and need to be replaced as soon as possible.

- Dim display.
- Distorted sound.
- Keyboard tones, songs or rhythms are played when no buttons or keys are pressed.
- Abnormal play of built-in songs, etc.
- Sudden, unexpected failure of notes to sound.

NOTE

- The Digital Keyboard will turn off automatically to preserve battery power if you do not perform any operation for about six minutes (Auto Power Off).