

Troubleshooting

- There is no sound when I press keyboard keys.
 - Check to make sure batteries are loaded or that the AC adaptor is connected correctly. (See "Power Supply".)
 - Unplug the plug from the **Ⓟ** (PHONES/OUTPUT) jack if one is connected.
- Sound and display operations are not normal.
 - Battery power may be low. See "Power Supply".

Specifications

- Keyboard : 32 mini-size keys, 2.5 octaves
Polyphony : 32 notes maximum
Tones : 100
Preset Rhythms : 50
Preset Songs : 10 tunes; melody off
Tuning : A4 = 418 to 440 to 465 Hz
Speakers : ϕ 8 cm \times 2 (output: 0.5 W + 0.5 W)
Power Jack : DC 9.5V
Phones/Output jack:
 Stereo mini jack
 Output Impedance: 120 Ω
 Output Voltage: 500 mV (RMS) MAX
- Power Supply : 2-way
- Batteries: 6 AA-size alkaline batteries or AA-size rechargeable nickel-metal hydride batteries
 - Battery Life: Approximately 12 hours (alkaline batteries), approximately 10 hours (rechargeable nickel-metal hydride batteries)*
 - AC Adaptor: AD-E95100LE/LG/LJ/LU/LW
 - Auto Power Off: Approximately 6 minutes after last key operation
- Power Consumption: 9.5 V \approx 3.2 W
Dimensions : 44.6 \times 20.8 \times 5.1 cm
 (17 ⁹/₁₆ \times 8 ³/₁₆ \times 2 inch)
Weight : Approximately 1.0 kg (2.2 lbs)
 (without batteries)
- * Measured values while using eneloop batteries.
eneloop is a registered trademark of Panasonic Corporation.

NOTE

- Design and specifications are subject to change without notice.
- You can get information about accessories that are separately for this product from the CASIO keyboard catalog available from your retailer, and from the CASIO website at the following URL.
<https://world.casio.com/>

For information about the product and its music scores, visit the CASIO website.

<https://support.casio.com/global/en/emi/manual/SA-50/>

