


# General Guide

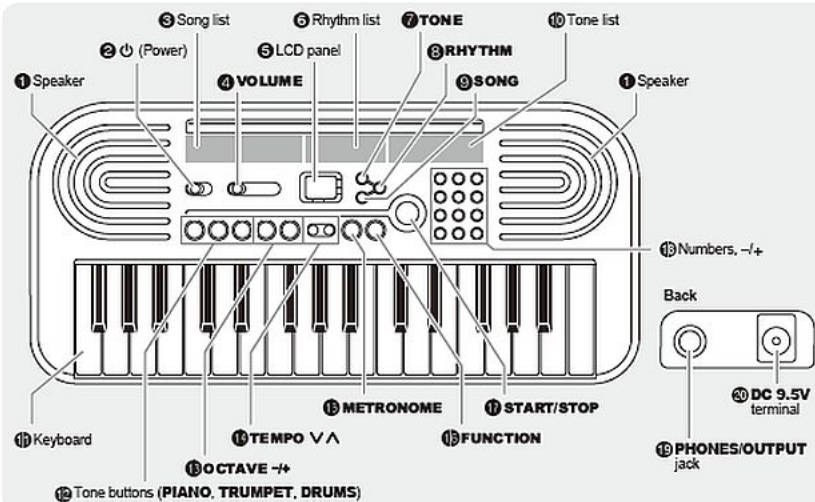


## Playing Something on the Digital Keyboard

1. Set 2 (Power) to "ON".  
The Digital Keyboard switches on.
2. Use 11 (Keyboard) to make a sound.
3. Use 4 (VOLUME) to adjust the volume.

## Playing Using Tones

1. Press 7 (TONE).

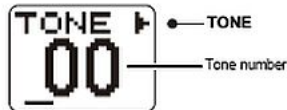

2. Choose your favorite tone from the 10 (Tone list) or from the tone list in this User's Guide, and then enter its number using the numbers or the plus (+) and minus (-) buttons 18.
  - For example, to select "05 ELEC PIANO 2", press "0" and then "5".
  - You can also use plus (+) and minus (-) buttons to change the number. ("+" increases the number and "-" decreases the number.) Holding the button down changes the number continuously.

- Press "+" and "-" at the same time to return to the original setting.

3. Use 11 (Keyboard) to play the tone you chose.

### NOTE

- You can use 12 (PIANO, TRUMPET, DRUMS) to quickly and easily select the GRAND PIANO (00), TRUMPET (50) and DRUM SET (09) tones.

## Playing Using the Metronome

1. Press 13 (METRONOME).  
The metronome starts up.
2. Press 13 (METRONOME) again to stop the metronome.

### NOTE

- For information on how to change the metronome tempo, see "Changing the Speed (Tempo) of a Rhythm or Built-in Song".